



How to change speed and density in Bartender

Step 1. Select “Printer Properties” button.

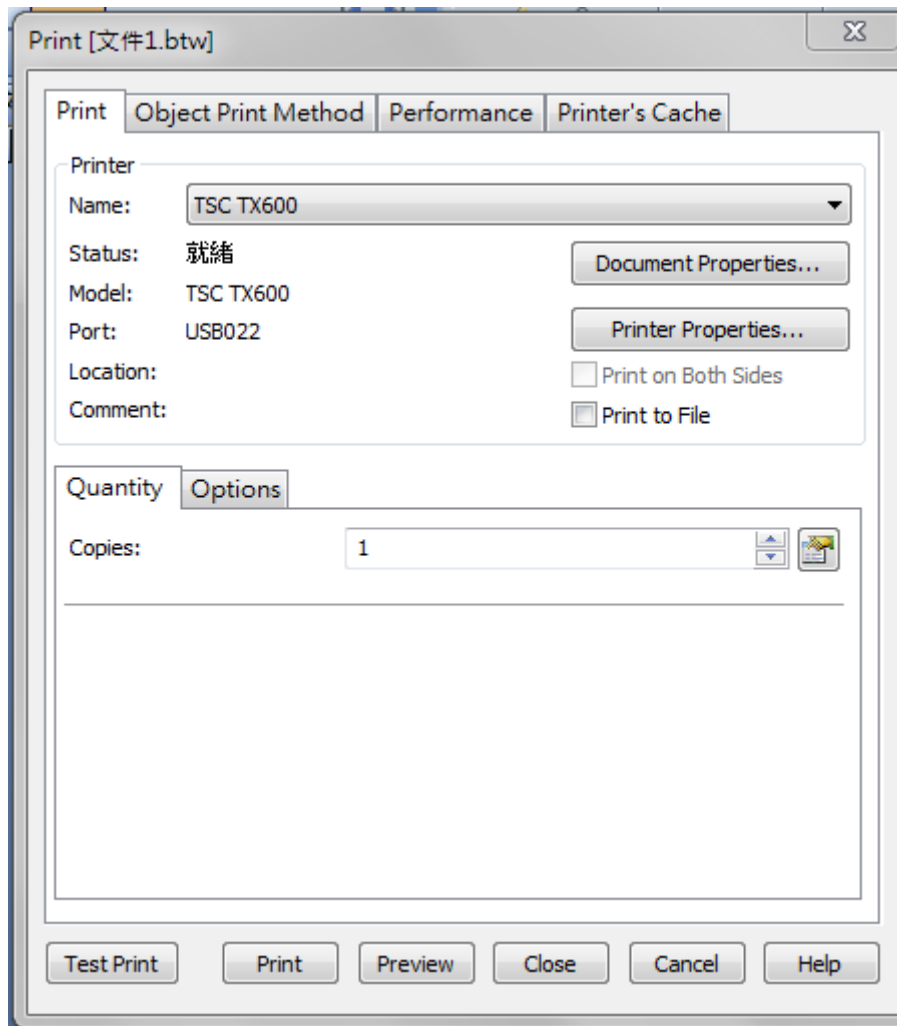

Step 2. Select “Options” tab and uncheck “Use Current Printer Settings” function.

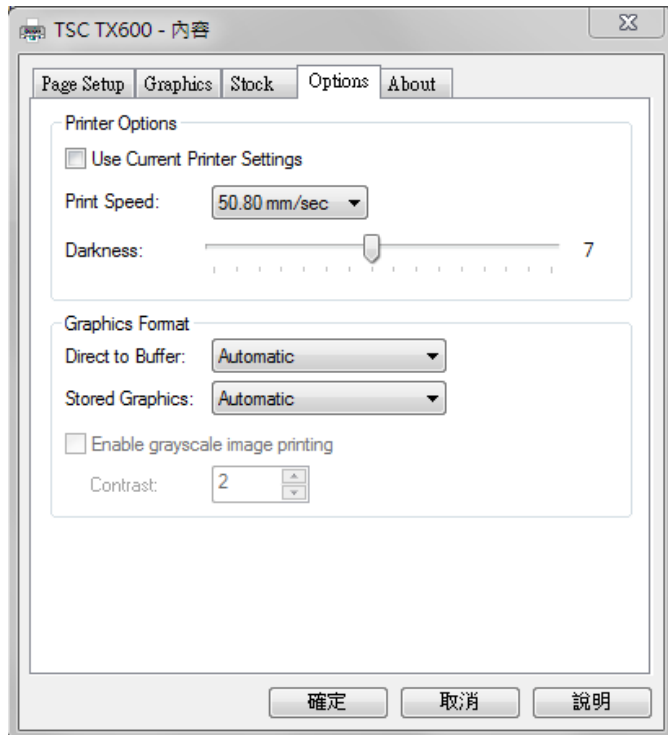

Step 3. Manual adjust speed and density setting.

