

How to change "Control Prefix" code with

Diagnostic Tool

Step 1: Execute Diagnostic Tool

Diagnostic Tool 1.63	m hi ha r		Aat A	aB	
Language	Unit		⊡Interfa	се	
English 💌	Inch ⊂ mm		USB	▼	Setup
Printer Configuration File Mana	ger Bitmap Font Manager (Command Tool			
Printer Function	Printer Configuration				
Calibrate Sensor	Version: DA200 Vers	ion: A1.96 EZ	Cutting Counter:	0	0
Ethernet Setup	Serial No:		Mileage:	0.0466	0.0466 Km
RTC Setup	Check Sum:	07DDC49E			
	Common Z D	RS-232 Wireless			
Factory Default	Darkness	16 0 to 30			
Reset Printer	Print Speed	4			
Print Test Page	Tear Off	0 -120 to 1	20		
	Print Mode	Tear Off 📃 💌	·		
Configuration Page	Print Width	4.00 inch			
Dump Text	Control Prefix	~			
Ignore AUTO.BAS	Format Prefix	<u>^</u>			
	Delimiter Char	·			
Exit Line Mode	Media Power Up	No Motion 💌	•		
Password Setup	Head Close	No Motion 💌	•		
	Label Top	0 -120 to 1	20		
	Left Position	0 -9999 to	9999		
Printer Status					
Get Status	Clear	Load Save		Set	Get

Step 2: To select "Z" tab.

Language	Unit		Interfa	ce		
English 🗾	l € inch C mm		IOSB	•	Setup	
Printer Configuration File Mar	nager Bitmap Font Manager Com	mand Tool				
Printer Function	Printer Configuration					
Calibrate Sensor	Version: DA200 Version	: A1.96 EZ	Cutting Counter:	0	0	-
Ethernet Setup	Serial No:		Mileage:	0.0466	0.0466	Km
RTC Setup	Check Sum:	07DDC49E				
Factory Default	Common Z D R: Darkness	S-232 Wireless 16 0 to 30				
Reset Printer	Print Speed	4				
Print Test Page	Tear Off	0 -120 to	120			
Configuration Page	Print Mode	Tear Off	<u>-</u>			
Dump Text	Control Prefix	~ Inch				
	Format Prefix	^				
Ignore Horte.bho	Delimiter Char					
Exit Line Mode	Media Power Up	No Motion	•			
Password Setup	Head Close	No Motion	•			
	Label Top	0 -120 to	120			
	Left Position	0 -9999 to	9999			
Printer Status	1					



 Corporate Headquarters
 Li Ze Plat

 9F., No.95, Minquan Rd., Xindian Dist., New Taipei City 23141, Taiwan
 No.35, Sec Yilan Court

 TEL: +886-22218-5678
 Web site: www.tscprinters.com

Li Ze Plant No.35, Sec. 2, Ligong 1st Rd., Wujie Township, Yilan County 26841, Taiwan TEL: +886-3-9906677 FAX: +886-3-9905577

Step 3: Type "\" code in "Control Prefix".

anguage				ce	
snghsh 🚬 🔻			JUSB		Setup
rinter Configuration File M.	anager Bitmap Font Manager	Command Tool			
Printer Function	Printer Configuration				
Calibrate Sensor	Version: DA200 V	/ersion: A1.96 EZ	Cutting Counter:	0	0
Ethernet Setup	Serial No:		Mileage:	0.0466	0.0466 Km
PTC Satura	Check Sum:	07DDC49E			
nic setup	Common Z D	RS-232 Wireless			
Factory Default	Darkness	16 0 to 30)		
Reset Printer	Print Speed	4			
Print Test Page	Tear Off	0 -120 to	o 120		
	Print Mode	Tear Off	•		
Configuration Page	Print Width	4.00 inch			
Dump Text	Control Prefix	N			
Ignore AUTO.BAS	Format Prefix	^			
	Delimiter Char				
E XIT LINE MODE	Media Power Up	No Motion	<u>•</u>		
Password Setup	Head Close	No Motion	•		
	Label Top	0 -120 ti	o 120		
	Left Position	0 -9999	to 9999		

Step 4: Click "Set" button.

Printer Configuration File Man	ager Bitmap Font Manager Command Tool		
Printer Function	Printer Configuration		
Calibrate Sensor	Version: DA200 Version: A1.96 EZ Cut	tting Counter: 0	0
Ethernet Setup	Serial No: Mile	leage: 0.0	0.0466 Km
RTC Setup	Check Sum: 0/DDC49E		
Factory Default	Darkness 16 0 to 30		
Reset Printer	Print Speed		
Print Test Page	Tear Off 0 -120 to 120		
Configuration Page	Print Width 4.00 inch		
Dump Text	Control Prefix		
Ignore AUTO.BAS	Format Prefix ^		
Exit Line Mode	Media Power Up No Motion		
Password Setup	Head Close No Motion		
	Label Top 0 -120 to 120		
	Left Position 0 -9999 to 9999	9	
Printer Status			
Get Status	Clear Load Save		Set Get